


**IMPORTANT INSTALLATION PROCEDURES
 IMPORTANT PROCÉDURES D'INSTALLATION
 WICHTIG EINBAUANLEITUNG
 IMPORTANTE PROCEDIMIENTO DE INSTALACIÓN
 IMPORTANTI PROCEDURE DI INSTALLAZIONE**

Air Flow Débit Luftvolumenstrom Caudal de aire Portata d'aria	Hydraulic pump flow Débit pompe Hydraulik Oldurchflussmenge Caudal bomba hidráulica Portata della pompa idraulica	Air vent holes to open Nombre de trous a ouvrir Anzahl der Zu öffnenden Locher Tapones de venteo a eliminar Numero di fori da aprire	Gearboxes Reducteurs Getriebe Reductores Riduttori
0 - 4 cfm @ 1 PSID / 0 - 113 L/mn		2	Open 2 holes Ouvrir 2 trous Öffnenden 2 Locher Retirar 2 tapones Aprire 2 fori
4 - 8 cfm @ 1 PSID / 113 - 226 L/mn		4	
8 - 12 cfm @ 1 PSID / 226 - 339 L/mn		6	
12 - 16 cfm @ 1 PSID / 339 - 452 L/mn		8	

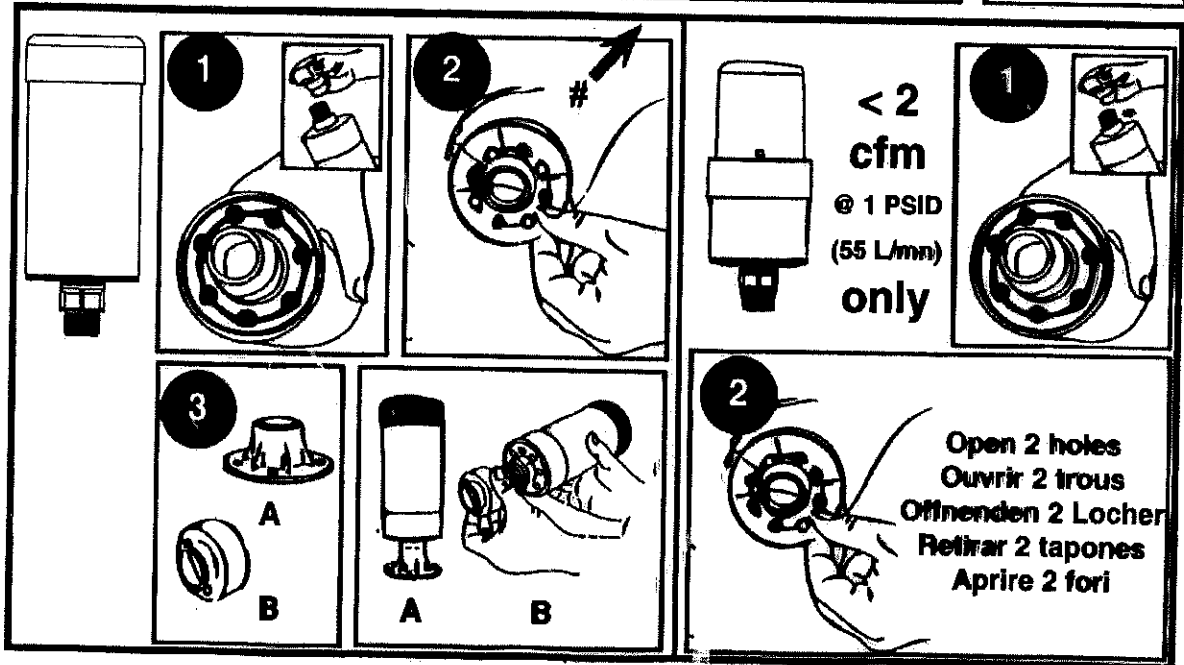

**IF YOU DO NOT GET AT LEAST 6 MONTHS LIFE OUT OF YOUR FIRST BREATHER, PLEASE CONTACT THE NUMBER ON YOUR BREATHER.
 Dispose of according to local regulations for the disposal of oil.**

LIMITED 12-MONTH WARRANTY